

## JCB DIESEL GENERATOR TECHNICAL SPECIFICATIONS





GII00QX

G1100X

### Powered by MTU

ELECTRICAL		PRIME	STAND BY
Output Rating	kVA	1006	1108
	kW	805	886
Frequency	Hz	50	
Rated Speed	RPM	1500	
Standard Voltage	v	400/230	
Circuit Breaker	amp	1600	
Power Factor		0.8	

ALTERNATOR		
Poles	No	4
Winding Connections		Star
Frame Mounting		SAE 0-18"
Insulation	Class	Н
Enclosure		IP23
Exciter System		Self-regulating brushless
Voltage Regulator		AVR (electronic)
Stead Voltage		+/- 1.5% (tested G1)
Bearing		Single bearing
Coupling		Flexible disc
Coating		Polyester Resin

**Prime:** This rating is for the supply of continuous electrical power, at variable load, in lieu of commercially purchase power. There is no limitation on the annual hours of operation and 10% over load power can be supplied for 1 hour in 12.

**Standby**: This rating is for the supply of continuous electrical power, at variable load, in the event of a Utility power failure. No overload is permitted.

ENGINE		PRIME	STAND BY	
Output Rating	kW	846	935	
Manufacturer		MTU		
Engine Model		16V2000G65		
Fuel		Diesel		
Injection		Direct		
Aspiration		Turbo Char	rged with Inter-cooler	
Cylinders				
Bore and Stroke	mm		130 x 150	
Displacement			31.84	
Cooling			Water	
Engine Oil		S	SAE 10W40	
Compression Ratio			6:	
Fuel Consumption				
100% Load Prime	l/h		204.91	
75% Load Prime	l/h		152.13	
50% Load Prime	l/h		152.13	
100% Load Standby	l/h		227.67	
Lube Oil Consumption		I% of	fuel consumption	
Engine Oil Capacity		102		
Coolant capacity	I		195	
Governor			Electronic	
Air Filter			Dry	
EXHAUST SYSTEM				
Maximum Temperature 100% Standby	°C		535	
Exhaust Gas Flow 100% Standby	m³/m	195		
Maximum Allowed Back Pressure	mbar	85		
Exhaust Size (Internal Diameter)	mm	140		
AIR SYSTEM				
Intake Air Flow 100% Standby	m³/h		4,320	
Cooling Air Flow 100% Standby	m <sup>3</sup> /s	20.4		
Alternator fan air flow	m <sup>3</sup> /s	1.614		
	111/5		1.011	
STARTING SYSTEM				
Starter Motor	kW	9.5		
Battery Capacity	Ah	260		
Auxiliary Voltage	V	24		
Starter Current – Maximum Power	Amp	1600		
– Firing Speed	Amp		800	
FUEL SYSTEM				
Diesel Specification				
Maximum Fuel Pressure at Connection	bar	+0.5		
Minimum Fuel Pressure at Connection	bar		-0.3	
Open Skid Fuel Tank Capacity		940		
Container Fuel Tank Capacity	Ι	999		

JCB Power Products LTD Rocester Staffordshire ST14 5JP, +44 (0) 1889 590312, <u>www.jcbpowerproducts.com</u> JCB reserves the right to change specifications without notice. Illustrations shown may include optional equipment and accessories Issue 3: G1100MTU 08/12

WEIGHT AND DIMENSIONS - OPEN			
Length	mm	4950	
Width	mm	1836	
Height	mm	2447	
Shipping Volume (Sea Ready)	m³	22.24	
Weight (Standard Build inclusive of oil	Kg	8,040	
and coolant)			



# JCB GII00X

WEIGHT AND DIMENSIONS - 20 ISO CONTAINER				
Length	mm	6,058		
Width	mm	2,438		
Height	mm	2,591		
Shipping Volume (Sea Ready)	m <sup>3</sup>	38.27		
Weight (Standard Build inclusive of oil and coolant)	Kg	12,340		
Sound Level @ 7M	db(A)	84		



# JCB GI I 00QX

### **CONTROL PANEL – JCB CPI**

The JCB CP1 control system is digital and has the capability to control, monitor and protect the generator. The display allows the user to easily monitor the status of the generator through an LCD display and LED outputs. It enables control of the generator operations through soft touch push button functionality and multi lingual capability



#### **CONTROL PANEL – JCB CP2**


The JCB CP2 control system is digital and has the capability to control, monitor and protect the generator the same as the JCB CP1 panel but additionally incorporates the functionality of the control module of the JCB ATP1.

The JCB CP2 Panel constantly monitors the mains and has to be hardwired into both mains and generator contactors. The display allows the user to easily monitor the status of the generator as well as controlling generator operation



#### **CONTROL PANEL – JCB ATPI**

The JCB ATP1 control module is integrated into an Automatic Transfer Switch, which provides automatic mains failure capability. The JCB ATP1 can communicate with a generator through either 2 wire start volt free contactors or CANBUS through CP1 to ATP1 (not compatible with CP2). The JCB ATP1 when connected via CANBUS to the JCB CP1 will give control functions and display generator information.

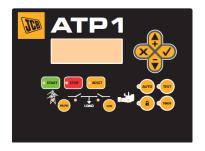

CONTROL PANEL FEATURES	CPI	CP2	ATPI
GENERATOR			
Phase to Phase Voltage	•	•	•
Phase to Neutral	•	•	•
Phase Amperage	•	•	•
Frequency	•	•	•
kVA	•	•	•
Kw	•	•	•
kVAr	•	•	•
Power Factor	•	•	•
MAINS		-	
Phase to Phase Voltage	×	•	•
Phase to Neutral	X	•	•
	X	•	•
Phase Amperage	X	•	•
Frequency	X	•	•
kVA	X	X	•
Kw	X	X	•
kVAr	X	X	•
Power Factor	X	X	•
ENGINE		1	
Coolant Temperature	•	•	x
Oil Pressure	•	•	x
Fuel Level Percentage	•	•	X
Battery Voltage	•	•	X
Engine RPM	•	•	x
Battery Charge Alternator Voltage	•	•	x
ENGINE ALARMS			
High Water temperature	•	•	x
High Coolant Temperature	•	•	x
Low Oil Pressure	•	•	x
Low Coolant Level	•	•	x
Unexpected Shutdown	•	•	x
Failure to Stop	•	•	x
Battery Voltage Failure	•	•	x
Battery Charge Alternator Failure	•	•	x
Over Speed	•	•	x
Under Speed	•	•	x
Failure to Start	•	•	x
Low Fuel level	•	•	x
Emergency Stop	•	•	•
ALTERNATOR ALARMS			
High Frequency	•	•	•
Low Frequency	•	•	•
High Voltage	•	•	•
	•	•	•
Low Voltage	•		
Over Amperage	•	•	X
Short Circuit			×
Symmetry Between Phases	•	•	•
Incorrect Phasing		•	
Inverse Power	•	•	X
Over Load	•	•	X
Generator Drop	X	X	•
	• Stand	ard x Not Avai	lable

JCB Power Products LTD Rocester Staffordshire ST14 5JP, +44 (0) 1889 590312, <u>www.jcbpowerproducts.com</u> JCB reserves the right to change specifications without notice. Illustrations shown may include optional equipment and accessories Issue 3: G1100MTU 08/12

CONTROL PANEL FEATURES	CPI	CP2	ATPI
MEASUREMENT			
Total Hours Run	•	•	•
Kilowatt Meter	•	•	•
Number of Starts	•	•	•
Number of Start Failures	•	•	•
Service Indicator	•	•	•
CONNECTIVITY			
Remote Screen (CAN)	$\bigtriangleup$	$\bigtriangleup$	$\bigtriangleup$
Local Monitoring (CANBUS)	$\bigtriangleup$	$\triangle$	$\bigtriangleup$
Local Monitoring (CANLAN)	$\bigtriangleup$	$\bigtriangleup$	$\bigtriangleup$
Remote Monitoring (CANModem – Fixed)	$\bigtriangleup$	$\bigtriangleup$	$\bigtriangleup$
Remote Monitoring (CANModem – GSM)	$\bigtriangleup$	$\bigtriangleup$	$\bigtriangleup$
FEATURES			
Events History	•	•	•
External Start capability	•	•	•
Programmable Start Restriction	•	•	•
Mains Failure Start	•	•	•
Generator Contact Activation	•	x	x
Mains and Generators Contact Activation	x	•	•
Fuel Transfer Control	•	•	x
Engine Temperature	•	•	x
Manual Override	•	•	x
Programmable Alarms	•	•	x
Generator Start in Test Mode	•	•	x
Programmable Outputs	•	•	x
Multi Lingual	•	•	•
Programmable Timer	•	•	x
Synchronisation	•	•	x

• Standard x Not Available  $\triangle$  Optional

#### **REFERENCE STANDARDS**

JCB Generators are CE certified and conform to the following Directives (subject to a country requiring such standard):

- EN 12100, EN13857, EN60204
- 2006/42/CE Machinery safety
- 2006/95/EC Low voltage
- 2004/108/CE Electromagnetic compatibility
- 2000/14/EC Sound Power Level (amended by 2005/88/EC)
- 97/68/EC Emissions(amended by 2002/88/EC & 2004/26/EC)
- Ambient reference conditions 1000mbar, 25°C, 30% relative humidity ISO3046
- Power according to ISO 8528 and ISO 3046
- Information based on standard specification equipment unless otherwise stated.

**Prime:** This rating is for the supply of continuous electrical power, at variable load, in lieu of commercially purchase power. There is no limitation on the annual hours of operation and 10% over load power can be supplied for 1 hour in 12.

**Standby**: This rating is for the supply of continuous electrical power, at variable load, in the event of a Utility power failure. No overload is permitted.

GENERATOR FEATURES	STANDARD	OPTIONAL
ENGINE		
Engine	•	х
Cooling Pack	•	х
Tropicalised Radiator	x	•
Heavy Duty Air Filter	•	х
MTU ADEC Governor	•	х
High Water Temperature Sender	•	х
Low Oil Pressure Sender	•	х
Oil Temperature Sender	•	х
Radiator Guards	•	х
Hot Component Guards	•	х
Manual Oil Drain Pump	•	х
Electric Oil Drain Pump	x	•
Fuel Heater	x	•
Electric Fuel Transfer Pump	x	•
Low Coolant Level Senders	•	х
Battery Charger	x	•
Water Jacket Heater	x	•
Exhaust Gas Compensator	•	х
Industrial Silencer – Open Set	•	х
Residential Silencer – Open Set	x	•
Residential Silencer – Container	•	х
ELECTRICS		
Alternator	•	х
Circuit Breaker	•	х
Busbar	•	х
Heavy Duty Batteries	•	х
Battery Isolator	•	х
Preparation for Earth Spike	•	х
Anti-condensation Heater	x	•
Optional Voltages	x	•
Class F Insulation	x	•
JCB CP1 Digital Controller	•	х
JCB CP2 Digital Controller	x	•
JCB ATP1 Automatic Transfer Switch	X	•
CONTAINER		
External Emergency Stop Button	•	х
Heavy Duty Base Frame	•	х
Integral Fuel Tank	•	х
Rockwool Sound Attenuation	•	х
Window for External Control Panel View	•	х
Anti-condensation Heater	x	•