

# JCB DIESEL GENERATOR TECHNICAL SPECIFICATIONS





GI000QX

G1000X

#### Powered by MTU

ELECTRICAL		PRIME	STAND BY
Output Rating	kVA	910	1003
	kW	728	802
Frequency	Hz	50	
Rated Speed	RPM	1500	
Standard Voltage	٧	400/230	
Circuit Breaker	amp	1600	
Power Factor		0.8	

ALTERNATOR		
Poles	No	4
Winding Connections		Star
Frame Mounting		SAE 0-18"
Insulation	Class	Н
Enclosure		IP23
Exciter System		Self-regulating brushless
Voltage Regulator		AVR (electronic)
Stead Voltage		+/- I.5% (tested GI)
Bearing		Single bearing sealed
Coupling		Flexible disc

**Prime:** This rating is for the supply of continuous electrical power, at variable load, in lieu of commercially purchase power. There is no limitation on the annual hours of operation and 10% over load power can be supplied for 1 hour in 12.

**Standby**: This rating is for the supply of continuous electrical power, at variable load, in the event of a Utility power failure. No overload is permitted.

ENGINE		PRIME	STAND BY
Output Rating	kW	766	847
Manufacturer		MTU	
Engine Model		16V2000G25	
Fuel		Diesel	
Injection		Direct	
Aspiration		Turbo Char	ged with After-Cooler
Cylinders			16V
Bore and Stroke	mm		130 x 150
Displacement	I		31.84
Cooling			Water
Engine Oil		9	SAE 10W40
Compression Ratio			l6: l
Fuel Consumption			
100% Load Prime	l/h		186.49
75% Load Prime	l/h		139.87
50% Load Prime	l/h		139.87
100% Load Standby	l/h		205.14
Lube Oil Consumption 100% Standby	l/h		2.05
Engine Oil Capacity	I		102
Coolant capacity	I		195
Governor			Electronic
Air Filter		Dry	
EXHAUST SYSTEM			
Maximum Temperature 100% Standby	°C		530
Exhaust Gas Flow 100% Standby	m3/min		177
Maximum Allowed Back Pressure	mbar	85	
Exhaust Flange Size (external diameter)	mm	200	
AIR SYSTEM			
Intake Air Flow 100% Standby	m³/h		3,960
Cooling Air Flow 100% Standby	m³/h		73,440
		-	
STARTING SYSTEM			
Starter Motor	kW		9.5
Battery Capacity	Ah		260
Auxiliary Voltage	V	24	
Starter Current – Maximum Power	Amp	1600	
- Firing Speed	Amp	800	
FUEL SYSTEM			
Diesel Specification			
Maximum Fuel Pressure at Connection	bar	+0.5	
Minimum Fuel Pressure at Connection	bar	-0.3	
Open Skid Fuel Tank Capacity		940	
Container Fuel Tank Capacity	<u> </u>	999	
Container Facilitating Capacity	<u>'</u>		

WEIGHT AND DIMENSIONS - OPEN				
Length	mm	4950		
Width	mm	1836		
Height	mm	2447		
Shipping Volume (Sea Ready)	m³	22.24		
Wet Weight (Standard Build)	Kg	6,840		
Dry Weight (Standard Build)	Kg	6,600		



### **JCB G1000X**

WEIGHT AND DIMENSIONS - 20 ISO CONTAINER				
Length	mm	6,058		
Width	mm	2,438		
Height	mm	2,591		
Shipping Volume (Sea Ready)	m³	33.27		
Wet Weight (Standard Build)	Kg	12,340		
Dry Weight (Standard Build)	Kg	12,100		
Sound Level @ 7M	db(A)	82		



## JCB G1000QX

#### **CONTROL PANEL – JCB CPI**

The JCB CP1 control system is digital and has the capability to control, monitor and protect the generator. The display allows the user to easily monitor the status of the generator through an LCD display and LED outputs. It enables control of the generator operations through soft touch push button functionality and multi lingual capability



#### **CONTROL PANEL – JCB CP2**


The JCB CP2 control system is digital and has the capability to control, monitor and protect the generator the same as the JCB CP1 panel but additionally incorporates the functionality of the control module of the JCB ATP1.

The JCB CP2 Panel constantly monitors the mains and has to be hardwired into both mains and generator contactors. The display allows the user to easily monitor the status of the generator as well as controlling generator operation



#### **CONTROL PANEL – JCB ATPI**

The JCB ATPI control module is integrated into an Automatic Transfer Switch, which provides automatic mains failure capability. The JCB ATPI can communicate with a generator through either 2 wire start volt free contactors or CANBUS through CPI to ATPI (not compatible with CP2). The JCB ATPI when connected via CANBUS to the JCB CPI will give control functions and display generator information.

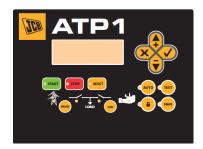

CONTROL PANEL FEATURES	СРІ	CP2	ATPI
GENERATOR			
Phase to Phase Voltage	•	•	•
Phase to Neutral	•	•	•
Phase Amperage	•	•	•
Frequency	•	•	•
kVA	•	•	•
Kw	•	•	•
kVAr	•	•	•
Power Factor	•	•	•
MAINS			
Phase to Phase Voltage	x	•	•
Phase to Neutral	х	•	•
Phase Amperage	х	•	•
Frequency	x	•	•
kVA	X	Х	•
Kw	X	x	•
kVAr	X	X	•
Power Factor	X	X	•
ENGINE	^	^	
Coolant Temperature	•	•	х
Oil Pressure	•	•	X
Fuel Level Percentage	•	•	X
Battery Voltage	•	•	×
Engine RPM	•	•	X
Battery Charge Alternator Voltage	•	•	×
ENGINE ALARMS			^
High Water temperature	•	•	х
High Coolant Temperature	•	•	×
Low Oil Pressure	•	•	
Low Coolant Level	•	•	X
Unexpected Shutdown	•	•	X
Failure to Stop	•	•	X
Battery Voltage Failure	•	•	X
, ,	•	•	X
Battery Charge Alternator Failure Over Speed	•	•	X
	•	•	X
Under Speed Failure to Start		•	X
Low Fuel level	•	•	X
	•	•	X •
Emergency Stop	•	•	•
ALTERNATOR ALARMS			•
	_	_	
High Frequency	•	•	
Low Frequency	•	•	•
Low Frequency High Voltage			
Low Frequency High Voltage Low Voltage	•	•	•
Low Frequency High Voltage Low Voltage Over Amperage	•	•	•
Low Frequency High Voltage Low Voltage Over Amperage Short Circuit	•	•	• • • X
Low Frequency High Voltage Low Voltage Over Amperage Short Circuit Symmetry Between Phases	•	•	• • • • • • • • • • • • • • • • •
Low Frequency High Voltage Low Voltage Over Amperage Short Circuit Symmetry Between Phases Incorrect Phasing	•	•	• • • X
Low Frequency High Voltage Low Voltage Over Amperage Short Circuit Symmetry Between Phases Incorrect Phasing Inverse Power	•	•	• • • • • • • • • • • • • • • • • • •
Low Frequency High Voltage Low Voltage Over Amperage Short Circuit Symmetry Between Phases Incorrect Phasing	•	•	• • • • • • • • • • • • • • • • •

• Standard x Not Available

CONTROL PANEL FEATURES	CPI	CP2	ATPI
MEASUREMENT			
Total Hours Run	•	•	•
Kilowatt Meter	•	•	•
Number of Starts	•	•	•
Number of Start Failures	•	•	•
Service Indicator	•	•	•
CONNECTIVITY			
Remote Screen (CAN)	Δ	$\triangle$	Δ
Local Monitoring (CANBUS)	Δ	Δ	Δ
Local Monitoring (CANLAN)	Δ	Δ	Δ
Remote Monitoring (CANModem – Fixed)	Δ	$\triangle$	Δ
Remote Monitoring (CANModem – GSM)	Δ	$\triangle$	Δ
FEATURES			
Events History	•	•	•
External Start capability	•	•	•
Programmable Start Restriction	•	•	•
Mains Failure Start	•	•	•
Generator Contact Activation	•	X	X
Mains and Generators Contact Activation	X	•	•
Fuel Transfer Control	•	•	X
Engine Temperature	•	•	X
Manual Override	•	•	x
Programmable Alarms	•	•	X
Generator Start in Test Mode	•	•	X
Programmable Outputs	•	•	x
Multi Lingual	•	•	•
Programmable Timer	•	•	х
Synchronisation	•	•	X

• Standard x Not Available  $\triangle$  Optional

#### **REFERENCE STANDARDS**

JCB Generators are CE certified and conform to the following Directives (subject to a country requiring such standard):

- EN 12100, EN13857, EN60204
- 2006/42/CE Machinery safety
- 2006/95/EC Low voltage
- 2004/108/CE Electromagnetic compatibility
- 2000/14/EC Sound Power Level (amended by 2005/88/EC)
- 97/68/EC Emissions(amended by 2002/88/EC & 2004/26/EC)
- Ambient reference conditions 1000mbar, 25°C, 30% relative humidity ISO3046
- Power according to ISO 8528 and ISO 3046
- Information based on standard specification equipment unless otherwise stated.

**Prime:** This rating is for the supply of continuous electrical power, at variable load, in lieu of commercially purchase power. There is no limitation on the annual hours of operation and 10% over load power can be supplied for 1 hour in 12.

**Standby**: This rating is for the supply of continuous electrical power, at variable load, in the event of a Utility power failure. No overload is permitted.

GENERATOR FEATURES	STANDARD	OPTIONAL
ENGINE		
Engine	•	X
Cooling Pack	•	X
Tropicalised Radiator	×	•
Heavy Duty Air Filter	•	Х
MTU ADEC Governor	•	X
High Water Temperature Sender	•	X
Low Oil Pressure Sender	•	х
Oil Temperature Sender	•	X
Radiator Guards	•	х
Hot Component Guards	•	X
Manual Oil Drain Pump	•	х
Electric Oil Drain Pump	×	•
Fuel Heater	×	•
Electric Fuel Transfer Pump	×	•
Low Coolant Level Senders	•	х
Battery Charger	×	•
Water Jacket Heater	×	•
Exhaust Gas Compensator	•	X
Industrial Silencer – Open Set	•	x
Residential Silencer – Open Set	×	•
Residential Silencer – Container	•	Х
ELECTRICS		
Alternator	•	х
Circuit Breaker	•	х
Busbar	•	х
Heavy Duty Batteries	•	X
Battery Isolator	•	х
Preparation for Earth Spike	•	X
Anti-condensation Heater	x	•
Optional Voltages	x	•
Class F Insulation	x	•
JCB CP1 Digital Controller	•	X
JCB CP2 Digital Controller	x	•
JCB ATP1 Automatic Transfer Switch	x	•
CONTAINER		
External Emergency Stop Button	•	x
Heavy Duty Base Frame	•	X
Integral Fuel Tank	•	X
Rockwool Sound Attenuation	•	х
Window for External Control Panel View	•	X
Anti-condensation Heater	Х	•